


ARAT Telephone mount

Type: Volkswagen
Lupo

Part No: 1266

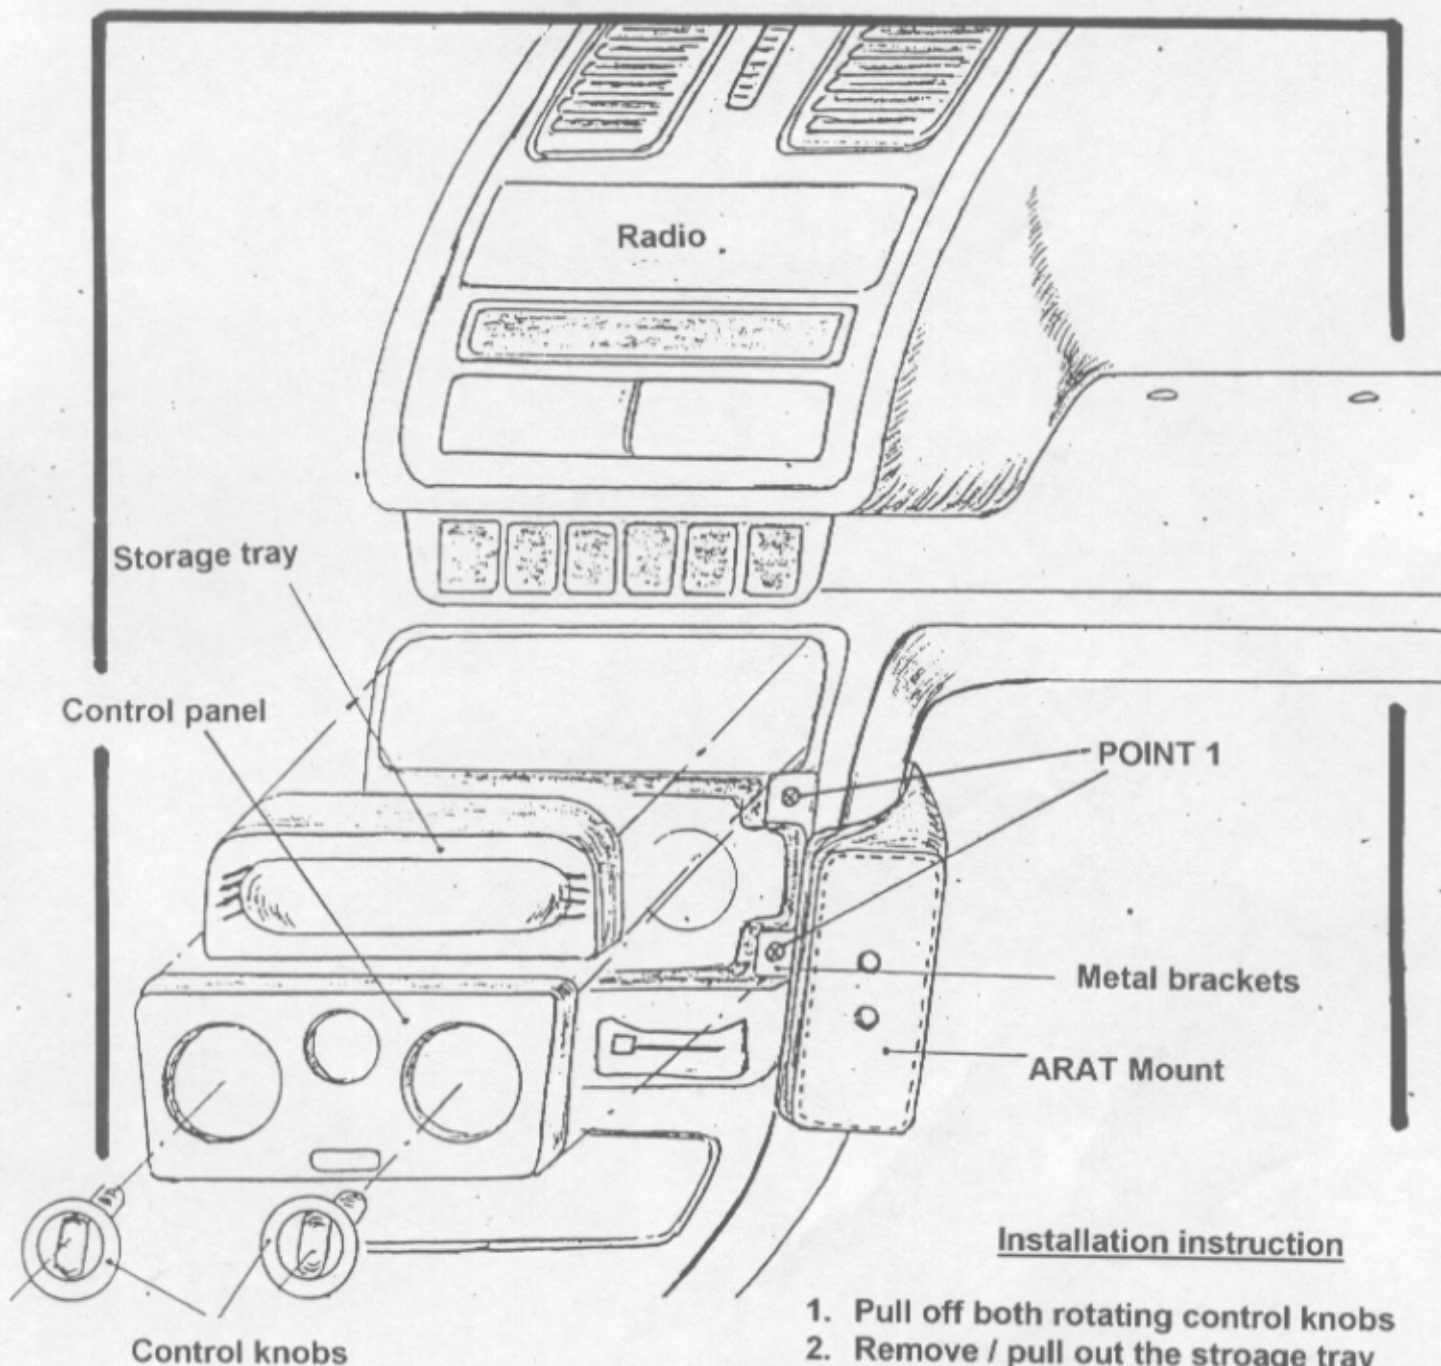

Installation instruction

1. Pull off both rotating control knobs
2. Remove / pull out the storage tray
3. Remove the control panel, is only a push fit, and remove both screws at POINT 1
4. Place the ARAT mount to the contours of the dashboard, with the previously removed screws secure the mount through the bracket
5. Replace the panel, storage tray, and control knobs